

See EasyLab Solutions Communicator connection diagram to DSC Alarm Panel Diagram

Keypad Programming:

Press: *8

Press: 5555.....(To access the DSC Programming)

Section 301:

Press: 301.....(Telephone Number 01)

Press: 1234

Press: * (Enter)

Section 310:

Press: 310.....(System Account Code)

Press: 1234

Press: * (Enter)

Section 311:

Press: 311.....(Partition 1 Account Code)

Press: 1234

Press: * (Enter)

If NOT using more than 1 partition, **SKIP to Programming of Section 350 (Partition 1 Account Code)**

If using more partitions, follow below instructions for partition **2 - 5 MAX**

Section 312:

Press: 312.....(Partition 2 Account Code)

Press: 1234

Press: * (Enter)

Section 313:

Press: 313.....(Partition 3 Account Code)

Press: 1234

Press: * (Enter)

Section 314:

Press: 314.....(Partition 4 Account Code)

Press: 1234

Press: * (Enter)

Section 315:

Press: 315.....(Partition 5 Account Code)

Press: 1234

Press: * (Enter)

EASYPAD SOLUTIONS
Communicator to:

DSC Alarm Panel CONTACT ID
Programming

Section 350:

Press: 350.....(Communicator format)

Press: 0300 (DTMF Contact Id)

If NOT using more than 1 partition, SKIP to Programming of Section 367 (Opening/Closing of Communicator Call Directions)

If using more partitions, follow below instructions for partition **2 - 5 MAX**

Section 351:

Press: 351.....(Communicator format)

Press: 0300 (DTMF Contact Id)

Section 352:

Press: 352.....(Communicator format)

Press: 0300 (DTMF Contact Id)

Section 353:

Press: 353.....(Communicator format)

Press: 0300 (DTMF Contact Id)

Section 354:

Press: 354.....(Communicator format)

Press: 0300 (DTMF Contact Id)

Section 367:

Press: 367.....(Open/Close of Comms Call Directions)

➤ Select 1 & 5 (1st Telephone Number, Alternate Comms)

Section 380:

Press: 380.....(Communications Enabled)

➤ Select 1, if it is not on (Default it is already on for Communications Enabled)

Optional:

Section 381:

➤ Press 381.....(Closing Confirmation Messages)

➤ Select 4 (Default it is disabled)

Press: # ,# , # (To save and go out of programming completely)

Keyswitch Away Arming Programming:

Press: *8

Press: 5555.....(To access the DSC Programming)

Section 001:

Press: 001.....(Zone Programming from zone 1 – 8)

The zones program in a string of 8 at a time and starts at zone 1, to move to the next zone press the > Key. **as an example, for programming Zone 1 as a momentary Keyswitch**

Press: 22.....(To program zone 1 as a momentary keyswitch)

Press: > ,+7 times Until it returns to main programming (Program Light Flashes)

Section 005:

Press: 005.....(System Times)

Press: 01.....(Partition 1 system times)

- 030 or > to keep current programming.....(Entry delay 1 is default 30 sec, if not using a remote for arming/disarming)
- 030 or > to keep current programming(Entry delay 2 is default 30 sec, if not using a remote for arming/disarming)
- 001..... (Exit Delay will be 01 second for instant arming)

Section 023:

Press: 023.....(Tenth System Option)

- Select 8, keyswitch arm in Away mode (If left default, Keyswitch arms in Away or Stay Mode)

Section 202:

Press: 202.....(Partition 1 Zone Assignment)

- Select 1, if it is not currently on (Zone 1 assigned to partition 1)

Press: # ,# , # (To save and go out of programming completely)

EASYPANEL SOLUTIONS
Communicator to:

DSC Alarm Panel
CONTACT ID Programming