

See EasyLab Solutions Communicator connection diagram to IDS 805 Alarm Panel Diagram

Keypad Programming:

Press: # 9999 * (To access the IDS Programming)

Location 43:

Press: 43.....(Primary Comms Account No, **digit 1**)

- * (Enter)
- 1
- * (Enter)

Location 44:

Press: 44.....(Primary Comms Account No, **digit 2**)

- * (Enter)
- 2
- * (Enter)

Location 45:

Press: 45.....(Primary Comms Account No, **digit 3**)

- * (Enter)
- 3
- * (Enter)

Location 46:

Press: 46.....(Primary Comms Account No, **digit 4**)

- * (Enter)
- 4
- * (Enter)

Location 47:

Press: 47.....(Primary Communicator Format)

- * (Enter)
- 6.....(Contact ID)
- * (Enter)

Location 48:

Press: 48.....(Primary Telephone No, **digit 1**)

- * (Enter)
- 1
- * (Enter)

Location 49:

Press: 49.....(Primary Telephone No, **digit 2**)

- * (Enter)
- 2
- * (Enter)

EASYPAD SOLUTIONS
Communicator to:

IDS 805 Alarm Panel CONTACT
ID Programming

Location 50:

Press: 50.....(Primary Telephone No, **digit 3**)

- * (Enter)
- 3
- * (Enter)

Location 51:

Press: 51.....(Primary Telephone No, **digit 4**)

- * (Enter)
- 4
- * (Enter)

Press: # ,# , # (To save and go out of programming completely)

Keyswitch Away Arming Programming:

Press: # 9999 * (To access the IDS Programming)

Location 1:

Press: 1.....(To program zone 1's definition as an example)

Press: * (Enter)

Press: 5.....(To program Zone 5 as a keyswitch for Away Arming/ Disarming)

Press: * (Enter)

Press: # ,# , # (To save and go out of programming completely)

