

See EasyLab Solutions Communicator connection diagram to IDs X Series Alarm Panel Diagram

Keypad Programming:

Press: # 9999 * (To access the IDS Programming)

Location 40:

Press: 40.....(Serial Communicator Format)

- Select 5, if is not on(Default it is already on for Contact ID)

Location 46:

Press: 46.....(Reporting Communications options)

- Select 1, if it is not on(Default it is already on for Tone Dialing)

Location 51:

Press: 51.....(Telephone Number 01)

Press: 1234

Press: * (Enter)

Location 61:

Press: 61.....(Reporting of partition 1)

Press: 1234

Press: * (Enter)

If NOT using more than 1 partition, **SKIP to Programming of location 211 (Partition 1 arming options)**

If using more partitions, follow below instructions for partition 2 - 5 MAX

Press: 62.....(Reporting of Partition 2)

Press: 1234

Press: * (Enter)

Press: 63.....(Reporting of Partition 3)

Press: 1234

Press: * (Enter)

Press: 64.....(Reporting of Partition 4)

Press: 1234

Press: * (Enter)

Press: 65.....(Reporting of Partition 5)

Press: 1234

Press: * (Enter)

EASYPAD SOLUTIONS
Communicator to:

IDS X Series Alarm Panel
CONTACT ID Programming

Location 211:

Press: 211.....(Partition 1 Arm Options)

- Select 16 (Default it is not selected for Opening/
Closing user Reporting)

If NOT using more than 1 partition, SKIP to Programming of location 581 (Split reporting Partitions, ONLY when using the keyswitch function !!!)

If using more partitions, follow below instructions for partition 2 - 5 MAX

Location 212:

Press: 212.....(Partition 2 Arm Options)

- Select 16 (Default it is not selected for Opening/
Closing user Reporting)

Location 213:

Press: 213.....(Partition 3 Arm Options)

- Select 16 (Default it is not selected for Opening/
Closing user Reporting)

Location 214:

Press: 214.....(Partition 4 Arm Options)

- Select 16 (Default it is not selected for Opening/
Closing user Reporting)

Location 215:

Press: 215.....(Partition 5 Arm Options)

- Select 16 (Default it is not selected for Opening/
Closing user Reporting)

Location 581:

Press: 581.....(Split reporting Partition 1)

- Select 7 (Default it is not selected for Armed
without user code reporting)

If using more partitions, follow below instructions for partition 2 - 5 MAX

Location 582:

Press: 582.....(Split reporting Partition 2)

- Select 7 (Default it is not selected for Armed
without user code reporting)

Location 583:

Press: 583.....(Split reporting Partition 3)

- Select 7 (Default it is not selected for Armed
without user code reporting)

Location 584:

Press: 584.....(Split reporting Partition 4)

- Select 7 (Default it is not selected for Armed
without user code reporting)

Location 585:

Press: 585.....(Split reporting Partition 5)

- Select 7 (Default it is not selected for Armed without user code reporting)

Press: # ,# , # (To save and go out of programming completely)

Keyswitch Away Arming Programming:

Press: # 9999 * (To access the IDS Programming)

Location 1:

Press: 1

Press * (Enter)

*Enter the zone number to program as a keyswitch: **for example, Zone 1***

Press: 1.....(To Program Zone 1)

Press: * (Enter)

Press: 5.....(To program Zone 5 as a keyswitch for Away Arming/ Disarming)

Press: * (Enter)

Press: # ,# , # (To save and go out of programming completely)

EASYLAB SOLUTIONS
Communicator to:

IDS X Series Alarm Panel
CONTACT ID Programming