

See EasyLab Solutions Communicator connection diagram to Texecom Alarm Panel Diagram

Keypad Programming:

Press: 1234 – MENU – 9

Press: 70.....(UDL & DIGI Options)

The following must be on in location 70:

1 (Enable Comms)

2 (DTMF Dialing)

5 (Auto Test)

8 (Blind Dialing)

Press: Yes/ Arm

Press: 71.....(ARC No.1 Settings)

Press: 0.....(Programming of tel no.)

Press: 1234 > Yes/ Arm

Press: 1..... (Account No.1 Code)

Press: 1234 > Yes/ Arm

Press: 2.....(Protocol Options)

➤ Press 4 (to turn on Contact ID)

Press: 3.....(Dialing Attempts)

➤ Press 3

Press: 4.....(Reporting Partitions)

➤ Press 1 > Yes/ Arm (Only select 2,3,4 to activate reporting of partitions 2,3 &4 **if in use**)

Press: 5.....(Reporting Events)

➤ **Select** the Reporting Options you want:

1.....(**Priority Alarm and Cancel Events**) **TURN ON**

2.....(**Alarm and Cancel Events**) **TURN ON**

3.....(**Open and Close Events**) **TURN ON**

4.....(Bypass and Unbypass Events) **Optional**

5.....(Maintenance Alarm Events) **Optional**

6.....(Tamper Alarm Events) **Optional**

7.....(Test Transmission Events) **Optional**

8.....(Restore Events) **Optional**

Press: 8.....(Protocol Options)

➤ Press 2 > Yes/ Arm

Press: Menu > 9 > 9 to exit complete programming or see next page to program the keyswitch function to arm via sms functionality

EASYPAN SOLUTIONS
Communicator to:

Texecom Alarm Panel
CONTACT ID Programming

Keyswitch Away Arming Programming:

Press: 10.....(All Zone Options)

Enter the zone number to program as a keyswitch: **for**

example, Zone 1

Press: 01.....(zone 1 to 9 is pressed as a double digit)

Press: 16.....(Momentary Keyswitch)

Press: 0.....(Normally Closed as wired in Diagram)

➤ Press Yes/ Arm

Press: 13.....(Zone Attributes 1)

Enter the zone number to program zone attributes 1: ex 01

➤ None Should be on

➤ Press: Yes/ Arm

Press: 14.....(Zone Attributes 2)

Enter the zone number to program zone attributes 2: ex 01

➤ None Should be on

➤ Press: Yes/ Arm

Press: 15.....(Zone Attributes 3)

Enter the zone number to program zone attributes 3: ex 01

➤ Only 3 should be turned on (Keyswitch is instant Arming)

➤ Press > Yes/ Arm

Press: 16.....(Zone Partition)

Enter the zone number to program to partition 1: ex 01

➤ Only 1 should be turned on for partition 1 arming/ disarming

➤ Press > Yes/ Arm

Press: 20.....(Exit Delay Time)

Enter partition 1 ex: 01 (*If only partition 1 is used it will not ask you to select a partition*)

➤ Press > 001

➤ Press > Yes/ Arm

Press: 21.....(Entry Delay Time)

Enter partition 1 ex: 01 (*If only partition 1 is used it will not ask you to select a partition*)

➤ Press > 001

➤ Press > Yes/ Arm

Press: 26.....(Partition 1 Options)

Enter partition 1 ex: 01 (*If only partition 1 is used it will not ask you to select a partition*)

➤ Select the following: 3 , 4, 5 & 8

➤ Press > Yes/ Arm

Press: Menu > 9 > 9 to exit complete programming

EASYLAB SOLUTIONS
Communicator to:

Texecom Alarm Panel
CONTACT ID Programming